



HP Envy 17-J013CL Battery Replacement

Replacing a broken or defective battery for the HP Envy 17-J013CL.

Written By: Matt McBride




INTRODUCTION

This guide is going to help replace the battery, as well as one of the steps to get into the laptop's deeper core parts.

Step 1 — Battery



- Lay the laptop with the battery facing towards you.

 Remember to disconnect the AC cable and other power sources from the device before replacing/repairing parts.

Step 2



- Grab hold of the small battery slider and apply pressure to the right.
- The laptop itself will push the battery out for you once the switch slides all the way to the right.

Step 3



- Pull the battery out and let go of the battery slider.

To reassemble your device, line up the battery and place it down into the metallic prongs for a stable connection.

This document was last generated on 2017-06-25 05:33:09 AM.